

Spares

149986-02	Spare 4-Channel Relay Control Module
125720-01	Spare 4-Channel Relay Output Module (available for repair only)
125720-02	Spare 4-Channel Relay Output Module for hazardous area systems and functional safety systems
04425545	Grounding wrist strap (single use)
00580453	Connector header, internal termination, 16-position, green
00580436	Connector header, internal termination, 6-position, green
166M2390	Connector header, push-in-spring type (alternative for PN 00580436)



For more information, please refer to the 3500/32 and 3500/32M 4-Channel and 3500/34 TMR Relay Modules User Guide (document 129771).