

Spares

Part Number	Description
04425545	Grounding Wrist Strap (single use)
137495-01	Firmware IC (Odd bank)
137494-01	Firmware IC (Even bank)
136180-01	3500/92 Communication Gateway Module.
125736-01	Modbus RS232/RS422 I/O Module.
133323-01	Modbus RS485 I/O Module.
136188-01	Ethernet/RS232 Modbus I/O Module*
136188-02	Ethernet/RS485 Modbus I/O Module*
Bently_ Manuals	International Technical Documentation DVD



* These spares include the Firmware Upgrade Kit (126M4118-01).

Accessories

Part Number	Description
139036-01	9-pin D-SUB "Y"
Serial Converters	
02230411	RS232 to RS422 Converter - 110 Vac.
02230412	RS232 to RS422 Converter - 220 Vac.
Ethernet Hubs	
165M2516	24-port 100/1000 SFP BE based switch

Part Number	Description
Ethernet Transceivers	
02200260	15-Pin AUI male to Fiber Optic Cable (10BASE-FL) with ST connection
02200261	15-Pin AUI male to Thinnet (10BASE2)
Ethernet Cabling - Standard 10 BASE-T Shielded , Category 5 Cable with RJ-45 Connectors	
02175190	6 ft. length
02175191	10 ft. length
02175192	25 ft. length