

(3) Three-axis servo amplifier modules (interface: Type A)

Model	Order specification	Wiring board specification	Printed circuit board specification	Remarks
SVM3-12/12/12	A06B-6079-H301	A16B-2202-0780	A20B-2001-0940	
SVM3-12/12/20	A06B-6079-H302	A16B-2202-0781		
SVM3-12/20/20	A06B-6079-H303	A16B-2202-0782		
SVM3-20/20/20	A06B-6079-H304	A16B-2202-0783		
SVM3-12/12/40	A06B-6079-H305	A16B-2202-0784		
SVM3-12/20/40	A06B-6079-H306	A16B-2202-0785		
SVM3-20/20/40	A06B-6079-H307	A16B-2202-0786		

(4) Three-axis servo amplifier modules (interface: Type B)

Model	Order specification	Wiring board specification	Printed circuit board specification	Remarks
SVM3-12/12/12	A06B-6080-H301	A16B-2202-0780	A20B-2001-0950	
SVM3-12/12/20	A06B-6080-H302	A16B-2202-0781		
SVM3-12/20/20	A06B-6080-H303	A16B-2202-0782		
SVM3-20/20/20	A06B-6080-H304	A16B-2202-0783		
SVM3-12/12/40	A06B-6080-H305	A16B-2202-0784		
SVM3-12/20/40	A06B-6080-H306	A16B-2202-0785		
SVM3-20/20/40	A06B-6080-H307	A16B-2202-0786		

(5) Single-axis servo amplifier module (interface: FSSB)

Model	Order specification	Wiring board specification	Printed circuit board specification	Remarks
SVM1-2	A06B-6096-H121	A16B-2202-0742	A20B-2100-0540 (A20B-2100-0250)	When using HRV3, use the following boards together: Wiring board: A16B-2202-074X Printed circuit board: A20B-2100-054X
SVM1-4	A06B-6096-H122	A16B-2202-0743		
SVM1-12	A06B-6096-H101	A16B-2202-0740		
SVM1-20	A06B-6096-H102	A16B-2202-0741		
SVM1-40S	A06B-6096-H103	A16B-2203-0450 (A16B-2202-0760)	A20B-2100-0540 (A20B-2100-0250)	When using HRV3, use the following boards together: Wiring board: A16B-2203-045X Printed circuit board: A20B-2100-054X
SVM1-40L	A06B-6096-H104	A16B-2203-0451 (A16B-2202-0761)		
SVM1-80	A06B-6096-H105	A16B-2203-0452 (A16B-2202-0762)		
SVM1-130S	A06B-6096-H116	A16B-2203-0453		
SVM1-130	A06B-6096-H106	A16B-2203-0454 (A16B-2202-0790)	A20B-2100-0542 (A20B-2100-0252)	
SVM1-240	A06B-6096-H107	A20B-1006-0485	A16B-2203-0300	
SVM1-360	A06B-6096-H108	A20B-1006-0485	A16B-2203-0301	