


FIELD INSTALLATION QUICK GUIDE

Installation Instructions

AI 3351

TMR analog input module

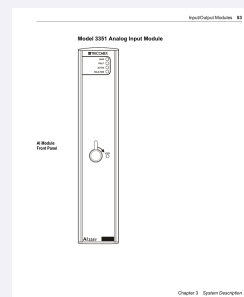

PRODUCT	AI 3351
FAMILY	Triconex safety system
FUNCTION	TMR analog input module
STATUS	Verify exact installed equipment

Prepared by Amikon Limited from Triconex documentation. This guide supplements the complete manufacturer manual and site procedure.

01

CONFIRM THE ORDERED CONFIGURATION

Module Type	TMR analog input module
Input Points	32 commoned channels
Nominal Input Current	4–20 mA DC
Operational Current Range	2–22 mA DC
Maximum Field Voltage	33 V DC
Maximum Reverse Voltage	–0.6 V DC


02

PREPARATION AND CONNECTION

- Confirm the complete AI 3351 article number and installed revision.
- Isolate applicable electrical and process energy using the approved site procedure.
- Record every connector, cable, terminal, shield and protective-earth connection before removal.
- Install without forcing keyed parts, then secure terminals, latches, fasteners and cable supports.

Model 3351 Analog Input Module

AI Module
Front Panel

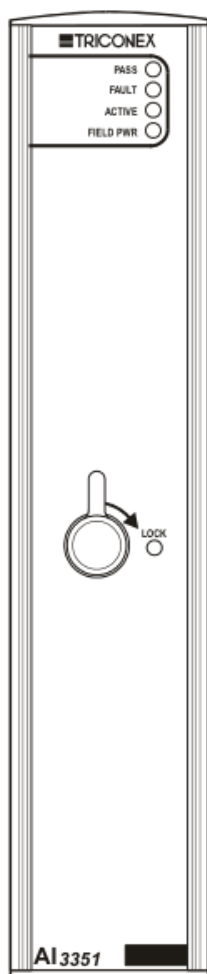

04 COMMISSIONING CHECKS

- 01 Confirm product identity and mechanical seating.
- 02 Verify the documented supply before energising.
- 03 Inspect polarity, shielding and protective-earth connections.
- 04 Restore power in the approved sequence and observe status indications.
- 05 Test each connected input, output or communication path.
- 06 Record diagnostics and functional-test results before return to service.

05 CONTROLLED DOCUMENT

Official source	Trident Planning Installation Guide
Product record	AI 3351
Manufacturer	Triconex
Warranty	12 months from AMIKON
Support	INFO@AMIKON.CN

AMIKON PRODUCT SUPPORT

+86-18020776786

INFO@AMIKON.CN

AMIKONG.COM