


FIELD INSTALLATION QUICK GUIDE

Installation Instructions

7400207-001 MP2101

Main processor baseplate

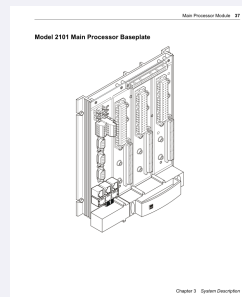

PRODUCT	7400207-001 MP2101
FAMILY	Triconex safety system
FUNCTION	Main processor baseplate
STATUS	Verify exact installed equipment

Prepared by Amikon Limited from Triconex documentation. This guide supplements the complete manufacturer manual and site procedure.

01

CONFIRM THE ORDERED CONFIGURATION


Component Type	Main processor baseplate
Order Reference	7400207-001 MP2101
System Platform	Triconex safety control system
Primary Function	Hosts paired Trident main processors
Circuit Capacity	Two processor positions
Nominal Supply	24 V DC logic distribution

02

PREPARATION AND CONNECTION

- Confirm the complete 7400207-001 MP2101 article number and installed revision.
- Isolate applicable electrical and process energy using the approved site procedure.
- Record every connector, cable, terminal, shield and protective-earth connection before removal.
- Install without forcing keyed parts, then secure terminals, latches, fasteners and cable supports.

Model 2101 Main Processor Baseplate

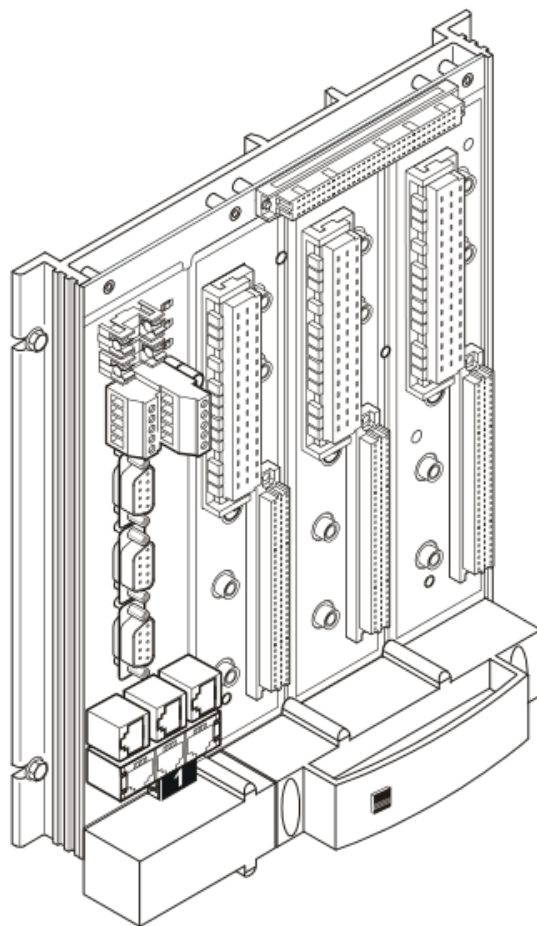

04 COMMISSIONING CHECKS

- 01 Confirm product identity and mechanical seating.
- 02 Verify the documented supply before energising.
- 03 Inspect polarity, shielding and protective-earth connections.
- 04 Restore power in the approved sequence and observe status indications.
- 05 Test each connected input, output or communication path.
- 06 Record diagnostics and functional-test results before return to service.

05 CONTROLLED DOCUMENT

Official source	Trident Planning Installation Guide
Product record	7400207-001 MP2101
Manufacturer	Triconex
Warranty	12 months from AMIKON
Support	INFO@AMIKON.CN

AMIKON PRODUCT SUPPORT

+86-18020776786

INFO@AMIKON.CN

AMIKONG.COM