

Installation Instructions

102044-00-32-10-02

proximity transducer service component

Bently Nevada proximity transducer systems

Before work begins

- 01 Confirm the exact 102044-00-32-10-02 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Manufacturer	Bently Nevada
Order Number	102044-00-32-10-02
Product Type	Proximity Transducer Service Component
System Family	Bently Nevada proximity transducer systems
Measurement Principle	Eddy-current or vibration sensing
System Supply	Matched monitor interface
Signal Interface	Coaxial transducer connection
Installation	Machine bearing housing
Target Material	Ferromagnetic shaft surface
Connector Check	Keying and contact condition

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 Controlled shaft measurement test.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.