

Installation Instructions

3500/15-04-04 114M5330-01

rack power supply module

3500 System

Before work begins

- 01 Confirm the exact 3500/15-04-04 114M5330-01 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Input voltage	20 to 30 Vdc
Full Rack Current Draw	11.0 A (maximum)
Operating temperature	-30 °C to +65 °C -22 °F to +150 °F
Storage temperature	-40 °C to +85 °C -40 °F to +185 °F
Exact Part Number	3500/15-04-04 114M5330-01
Product Family	3500 System
Component Type	Rack Power Supply Module
Rack Series	3500 machinery protection
Input Frequency	47 to 63 Hz
DC Input Range	88 to 140 V DC

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 Rear rack power input.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.