

Installation Instructions

128987-130-02-05

proximity sensor probe

3300 XL 8 mm Proximity Transducer

Before work begins

- 01 Confirm the exact 128987-130-02-05 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Operating Voltage	-18V to -26V DC
Sensitivity	200 mV/mil
Gap Range	0.5 to 2.5 mm
Operating Temperature	Standard: -35°C to +125°C (Probe Tip)
Cable Temperature	-35°C to +150°C
Humidity	100% RH non-condensing
Exact Part Number	128987-130-02-05
Product Family	3300 XL 8 mm Proximity Transducer
Component Type	Proximity Sensor Probe
Measurement Principle	Eddy-current proximity sensing

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

01 0 to 10 kHz.

02 Check insulation and protective-earth continuity before energising..

03 Restore auxiliary and main power in the approved sequence..

04 Observe controller, interface and equipment diagnostics..

05 Test the connected signal, network, motor or power function at a controlled operating point..

06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.