

Installation Instructions

3500/65 136188-02

machinery monitoring component

3500 System

Before work begins

- 01 Confirm the exact 3500/65 136188-02 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Power Consumption	3 watts nominal
Input Impedance	Greater than 1 M Ω for each lead input
Operating Temperature	-30°C to +65°C (-22°F to +150°F)
Storage Temperature	-40°C to +85°C (-40°F to +185°F)
Exact Part Number	3500/65 136188-02
Product Family	3500 System
Component Type	Machinery Monitoring Component
Channel Capacity	16 channels
Rack Space	One full-height slot
Backplane Supply	3500/3300 rack power

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 Rack configuration software.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.