

Installation Instructions

3500/42 125672-02

machinery monitoring module

3500 System

Before work begins

- 01 Confirm the exact 3500/42 125672-02 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Gap filter	-3 dB at 0.09 Hz
Smax	0.125 to 15.8 times runningspeed
1X and 2Xvector filter	Constant Q FilterMinimum rejection instopband of -57.7
Signal Accepts from	1 to 4 proximity
Power consumption	7.7 watts, typical
Standard	10 k Ω
Output Impedance	550 Ω
Voltage Compliance	0 to +12 Vdc range acrossload
Exact Part Number	3500/42 125672-02
Product Family	3500 System

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 Condition-monitoring transducer.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.