

Installation Instructions

792414506-04

machinery monitoring component

Bently Nevada monitoring systems

Before work begins

- 01 Confirm the exact 792414506-04 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Bently Nevada discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Exact Part Number	792414506-04
Product Family	Bently Nevada monitoring systems
Component Type	Machinery Monitoring Component
Approval Selection	Verify country option
Order Code Groups	2 groups
Hardware Class	Industrial monitoring assembly
Mounting	Rack or panel installation
Supply Class	24 V DC control circuits
Signal Interface	Condition-monitoring I/O
Protection Class	IP20 cabinet equipment

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 IP20 cabinet equipment.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Bently Nevada controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.