

Installation Instructions

FC-TCNT11 51307928-176

redundant FSC controller

Honeywell Safety Manager FSC systems

Before work begins

- 01 Confirm the exact FC-TCNT11 51307928-176 article number and installed equipment position.
- 02 Place the equipment in a safe state, isolate all energy sources and follow the applicable Honeywell discharge or lockout procedure.
- 03 Record terminals, connectors, signal cables, cooling provisions and protective-earth conductors.
- 04 Use ESD controls and qualified industrial-service personnel throughout the replacement.

Model-specific connection checks

Model Number	FC-TCNT11
Part Number	51307928-176
Controller Type	S300 redundant controller
Operating Voltage	24 V DC
Power Consumption	Less than 20 W typical
Operating Temperature	-10 to +60 °C
Storage Temperature	-40 to +85 °C
Controller Mode	Redundant pair operation
Rack Interface	FSC controller backplane
Network Function	Safety-system communication

Installation sequence

- Inspect the replacement for transport damage, contamination, bent pins and altered keying.
- Install without forcing connectors or terminals; restore all shields, grounds and cooling provisions.
- Secure power and signal connections under the applicable manufacturer procedure.

Commissioning and return to service

- 01 Match both controller revisions.
- 02 Check insulation and protective-earth continuity before energising..
- 03 Restore auxiliary and main power in the approved sequence..
- 04 Observe controller, interface and equipment diagnostics..
- 05 Test the connected signal, network, motor or power function at a controlled operating point..
- 06 Record the final article number, test results and maintenance approval..

This AMIKON installation reference supplements the applicable Honeywell controlled documentation and the site safety procedure.
Warranty: 12 months from AMIKON.