

OFFICIAL MANUFACTURER DOCUMENT PACKAGE

Installation Instructions

6ES7516-3FN02-0AB0

Siemens official documentation for the exact article number.

Source: 6ES7516-3FN02-0AB0.pdf

Selected official Siemens pages follow this cover.

SIMATIC

S7-1500/ET 200MP Automation system

System Manual

Introduction	1
Safety information	2
New properties/functions	3
Industrial cybersecurity	4
System overview	5
Application planning	6
Installation	7
Wiring	8
Configuring	9
Basics of program execution	10
Protection	11
Flexible automation concepts	12
Commissioning	13
CPU display	14
Maintenance	15

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified persons are those who, because of their training and experience, are familiar with the installation, assembly, commissioning, operation, decommissioning and disassembly of the product and can recognize risks and avoid possible hazards.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the application described in the catalog and the associated usage information. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens Aktiengesellschaft. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction.....	12
1.1	SiePortal.....	14
1.2	S7-1500/ET 200MP documentation guide.....	15
1.2.1	Information classes S7-1500/ET 200MP.....	15
1.2.1.1	S7-1500/ET 200MP documentation guide.....	15
1.2.2	SIMATIC Technical Documentation.....	17
2	Safety information.....	19
2.1	Warnings in this document.....	19
2.2	Safety-related symbols.....	19
2.2.1	Devices without explosion protection.....	19
2.2.2	Devices with explosion protection.....	20
2.3	Intended use.....	21
2.4	Changes to the device and spare parts.....	21
2.5	Knowledge and personnel qualification.....	22
2.6	Personal protective equipment.....	22
2.7	Open Source Software.....	22
2.8	Safe working.....	23
2.8.1	Working on electrical parts.....	23
2.9	Residual risks.....	24
2.9.1	Live parts.....	24
2.9.2	External power supply to modules.....	25
2.9.3	Voltage dangerous to touch due to permissible electric potential difference.....	25
2.9.4	Conductive pollution.....	25
2.9.5	Overheating.....	26
2.9.6	Uncontrolled movements.....	26
2.9.7	Unsafe operating states.....	26
2.10	Behavior in case of emergency.....	27
2.11	Material damage.....	27
2.11.1	Transport and storage.....	27
2.11.2	Installation and connection.....	27
3	New properties/functions.....	28
4	Industrial cybersecurity.....	42
4.1	Cybersecurity information.....	42
4.2	Security update notification.....	43
4.3	Basic information on industrial cybersecurity.....	43
4.3.1	Definition of industrial cybersecurity.....	43

5.8.9	Technology Module TM NPU.....	154
5.8.10	Technology module TM MFP.....	155
5.9	Power supply.....	156
5.10	Connection elements and system cabling.....	158
5.11	Software.....	161
5.11.1	TIA Portal	161
5.11.2	TIA Selection Tool.....	162
5.11.3	SIMATIC Automation Tool	162
5.11.4	SINETPLAN.....	163
5.11.5	PRONETA	164
5.11.6	SIMATIC S7 app	164
6	Application planning.....	165
6.1	Hardware configuration.....	165
6.1.1	Hardware configuration of the S7-1500 automation system.....	165
6.1.2	Hardware configuration of the ET 200MP distributed I/O system with PROFINET inter- face module	167
6.1.3	Hardware configuration of the ET 200MP distributed I/O system with PROFIBUS inter- face module	168
6.2	System and load power supply.....	169
6.2.1	Use of system power supplies.....	171
6.2.2	Special considerations for the use of a system power supply in the first power seg- ment	173
6.2.3	Special requirements when using the power supply PS 60W 24/48/60VDC HF	175
6.3	Power balance calculation.....	179
6.4	Use of load power supplies.....	182
7	Installation.....	183
7.1	Basics.....	183
7.2	Installing the mounting rail.....	185
7.3	Installing the standard rail adapter.....	189
7.4	Installing a system power supply.....	194
7.5	Installing a load current supply.....	196
7.6	Installing the CPU.....	198
7.7	Installing the interface module.....	200
7.8	Installing I/O modules.....	202
8	Wiring.....	204
8.1	Rules and regulations for operation.....	204
8.2	Additional rules and regulations for operation of the S7-1500/ET 200MP with fail-safe modules	207
8.2.1	Safety extra-low voltage (SELV, PELV) for failsafe modules.....	207
8.2.2	Requirements of sensors and actuators for fail-safe modules.....	208