

OFFICIAL MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

6GK5788-2GD00-0AA0

Siemens official documentation for the exact article number.

Source: 6GK5788-2GD00-0AA0.pdf

Selected official Siemens pages follow this cover.

Introduction

1.1 Information on the Operating Instructions

Validity of the Operating Instructions

These operating instructions cover the following products:

	Article no. of the RoW version	Article no. of the US version	Article number of the Israel version
Access points			
SCALANCE W788-1 RJ-45	6GK5788-1FC00-0AA0	6GK5788-1FC00-0AB0	-
SCALANCE W788-1 M12	6GK5788-1GD00-0AA0	6GK5788-1GD00-0AB0	-
Dual access points			
SCALANCE W788-2 RJ-45	6GK5788-2FC00-0AA0	6GK5788-2FC00-0AB0	6GK5788-2FC00-0AC0
SCALANCE W788-2 M12	6GK5788-2GD00-0AA0	6GK5788-2GD00-0AB0	-
SCALANCE W788-2 M12 EEC	6GK5788-2GD00-0TA0	6GK5788-2GD00-0TB0	-
Ethernet client modules			
SCALANCE W748-1 RJ-45	6GK5748-1FC00-0AA0	6GK5748-1FC00-0AB0	-
SCALANCE W748-1 M12	6GK5748-1GD00-0AA0	6GK5748-1GD00-0AB0	-

If information relates to all the named products, the term SCALANCE W7x8 will be used.

These operating instructions apply to the following software version:

- SCALANCE W7x8 with firmware as of version 6.1

Purpose of the Operating Instructions

Using the Operating Instructions, you will be able to install and connect the SCALANCE W7x8 correctly. The configuration and the integration of the device in a WLAN are not described in these instructions.

Documentation on the accompanying CD

You will find detailed information about configuration in the SCALANCE W700 configuration manuals on the accompanying SIMATIC NET IWLAN CD under the file name:

PH_SCALANCE-W780-W740-WBM_0.pdf and **PH_SCALANCE-W780-W740-CLI_0.pdf**

Note

Make sure that you read the explanations and instructions in the README.txt file
