

MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

SIEMENS SIMATIC S7

6ES7144-1FB31-0XB0

TWO-CHANNEL ANALOG INPUT MODULE

Used with the applicable SIMATIC ET 200X distributed I/O configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: Siemens official product documentation

7.4	BM 142 DO 4 x DC 24V/2A basic module (6ES7 142-1BD22-0XB0)	7-18
7.5	BM 143-DESINA FO basic module (6ES7 143-1BF00-0XB0)	7-22
7.6	BM 143-DESINA RS485 basic module (6ES7 143-1BF00-0AB0)	7-28
7.7	EM 141 DI 4 DC 24V expansion module (6ES7 141-1BD31-0XA0)	7-34
7.8	EM 141 DI 8 DC 24V expansion module (6ES7 141-1BF31-0XA0)	7-37
7.9	EM 141 DI 8 DC 24V DIAG expansion module (6ES7 141-1BF30-0XB0)	7-39
7.10	EM 141 DI 8 DC 24V expansion module (6ES7 141-1BF41-0XA0)	7-44
7.11	EM 141 DI 8 DC 24V DIAG expansion module (6ES7 141-1BF40-0XB0)	7-47
7.12	EM 142 DO 4 x DC 24V/0.5A expansion module (6ES7 142-1BD30-0XA0)	7-51
7.13	EM 142 DO 4 DC 24V/2A expansion module (6ES7 142-1BD40-0XA0)	7-54
7.14	EM 142 DO 4 x DC 24V/2A expansion module (6ES7 142-1BD40-0XB0)	7-57
7.15	EM 142 DO 8 x DC 24V/1.2A expansion module (6ES7 142-1BF30-0XA0)	7-62
7.16	EM 143-DESINA expansion module (6ES7 143-1BF30-0XB0)	7-65
7.17	EM 148-P DI 4 DC 24V/DO 2 P expansion module (pneumatic module) (6ES7 148-1DA00-0XA0)	7-70
7.18	EM 148-P DO 16 P/CPV10 expansion module (pneumatic interface module for CPV10) (6ES7 148-1EH00-0XA0)	7-74
7.19	EM 148-P DO 16 P/CPV14 expansion module (pneumatic interface module for CPV14) (6ES7 148-1EH10-0XA0)	7-76
7.20	PM 148 DO 4 DC 24V/2A power module (6ES7 148-1CA00-0XB0)	7-78
7.21	Expansion modules with analog inputs and outputs	7-83
7.21.1	Parameters of the analog inputs and outputs	7-85
7.21.2	Analog value representation for measuring ranges with SIMATIC S7 ...	7-87
7.21.3	Analog value representation for the measuring ranges of the analog inputs and outputs (SIMATIC S7 Format)	7-88
7.21.4	Analog value representation for measuring ranges with SIMATIC S5 ...	7-94
7.21.5	Analog value representation for the measuring ranges of the analog inputs and outputs (SIMATIC S5 format)	7-95
7.21.6	Behavior of the analog inputs and outputs during operation and in the event of faults	7-103
7.21.7	Connecting measuring sensors to the analog inputs	7-106
7.21.8	Connecting loads to the analog outputs	7-109
7.21.9	EM 144 AI 2 x U expansion module (6ES7 144-1FB31-0XB0)	7-111
7.21.10	EM 144 AI 2 x I expansion module (+/-20 mA) (6ES7 144-1GB31-0XB0)	7-114
7.21.11	EM 144 AI 2 x I expansion module (4 to 20 mA) (6ES7 144-1GB41-0XB0)	7-117

7-8	Basic circuit diagram for expansion module EM 141 DI 8 x DC 24V (6ES7 141-1BF31-0XA0)	7-38
7-9	Basic circuit diagram for expansion module EM 141 DI 8 x DC 24V DIAG (6ES7 141-1BF30-0XB0)	7-41
7-10	Basic circuit diagram of expansion module EM 141 DI 8 x DC 24V (6ES7 141-1BF41-0XA0)	7-45
7-11	Basic circuit diagram of expansion module EM 141 DI 8 x DC 24V DIAG (6ES7 141-1BF40-0XB0)	7-48
7-12	Basic circuit diagram of expansion module EM 142 DO 4 x DC 24V/0.5A	7-52
7-13	Basic circuit diagram of expansion module EM 142 DO 4 x DC 24V/2A	7-55
7-14	Basic circuit diagram of expansion module EM 142 DO 4 x DC 24V/2A	7-58
7-15	Basic circuit diagram for expansion module EM 142 DO 8 x DC 24V/1.2A	7-63
7-16	Basic circuit diagram of expansion module EM 143-DESINA	7-66
7-17	Basic circuit diagram for EM 148-P DI 4 x DC 24V/DO 2 x P expansion module	7-71
7-18	Pneumatic connection diagram of a 4/2-way valve	7-71
7-19	Basic circuit diagram of the EM 148-P DO 16 x P/CPV10 expansion module	7-74
7-20	Assigning addresses to the pneumatic interface module	7-75
7-21	Basic circuit diagram for EM 148-P DO 16 x P/CPV14 expansion module	7-76
7-22	Assigning addresses to the pneumatic interface module	7-77
7-23	Basic circuit diagram of power module PM 148 DO 4 x DC 24V/2A (6ES7 148-1CA00-0XB0)	7-79
7-24	Connection of voltage sensors to analog inputs (EM with order number 6ES7 144-1FB31-0XB0)	7-106
7-25	Connection of current sensors (two-wire measuring transducers) to analog inputs (EM with order number 6ES7 144-1GB41-0XB0)	7-107
7-26	Connection of current sensors (four-wire measuring transducers) to analog inputs (EM with order number 6ES7 144-1GB31-0XB0)	7-108
7-27	Connection of current sensors (four-wire measuring transducers) to analog inputs (EM with order number 6ES7 144-1GB41-0XB0)	7-108
7-28	Connection of resistance thermometers to EM 144 AI 2 x RTD (EM with order number 6ES7 144-1JB31-0XB0)	7-109
7-29	Connection of loads to a voltage or current output (analog output; EM with order number 6ES7 145-1FB31-0XB0; 6ES7 145-1GB31-0XB0) ...	7-110
7-30	Basic circuit diagram of expansion module EM 144 AI 2 x U	7-112
7-31	Basic circuit diagram of expansion module EM 144 AI 2 x I	7-115
7-32	Basic circuit diagram of Expansion module EM 144 AI 2 x I (4 to 20 mA)	7-118
7-33	Basic circuit diagram of expansion module EM 144 AI 2 x RTD	7-121
7-34	Basic circuit diagram of expansion module EM 145 AO 2 x U	7-124
7-35	Basic circuit diagram of expansion module EM 145 AO 2 x I	7-127
7-36	Basic circuit diagram for SITOP power supply	7-129
C-1	Dimensioned drawing of BM 141, BM 142, BM 147/CPU basic module	C-2
C-2	Dimensioned drawing of the BM 141-ECOFAS, BM 143-DESINA basic modules	C-3
C-3	Dimensioned drawing of EM 141, EM 142, EM 144, EM 145 expansion modules	C-4
C-4	Dimensioned drawing of EM 141 (high design), EM 142 DO 8 x DC 24V/1.2A and EM 143-DESINA expansion modules	C-5
C-5	Dimensioned drawing of the pneumatic module	C-5
C-6	Dimensioned drawing of the pneumatic interface module	C-6
C-7	Dimensioned drawing – power module	C-7
C-8	Dimensioned drawing of SITOP power	C-8
C-9	Dimensioned drawings of the Narrow DIN rails	C-9

SIMATIC

ET 200X Distributed I/O Device

Manual

Preface, Contents

1

Product Overview

2

Configuration Options

3

Installation

4

Wiring

5

Commissioning and Diagnostics

6

General Technical Specifications

7

Technical Specifications

Appendices

A

Order Numbers

B

Device Master Files

C

Dimensioned Drawings and
Pinouts

Glossary, Index

This manual is part of the documentation
package with the order number
6ES7198-8FA10-8BA0

Edition 02/2003

EWA 4NEB 780601602-06