

MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

DELTA V

KJ4006X1-BD1

I/O INTERFACE TERMINAL BLOCK

Used with the applicable DeltaV S-series traditional I/O configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: Emerson official manufacturer documentation

KJ4006X1-BD1 Interface Terminal Block

Hazardous Atmosphere



II 3G Ex ec IIC Gc
FM19ATEX0173U
IECEX FMG 19.0019U
FM21UKEX0017U



CL. I Div. 2 GP. A,B,C,D
CL. I Zone 2 AEx/Ex ec IIC Gc
FM17CA0145U
FM17US0286U

Power Specifications

Field Power 35 VDC at 1 A

Environmental Specifications

Ambient Temperature	-40°C to +70°C
Shock	10g ½ Sinewave for 11msec
Vibration	1mm Peak to Peak from 2 to 13.2Hz; 0.7g from 13.2 to 150Hz
Airborne Contaminants	ISA-S71.04 –1985 Airborne Contaminants Class G3
Relative Humidity	5 to 95% Non-Condensing
Terminal Block Key Position	Set according to I/O card installed

Note: Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P5404 "*DeltaV™ S-Series Digital Automation System Zone 2 Installation Instructions*". Other installation instructions are available in the "*DeltaV™ S-Series and CHARMS Hardware Installation*" manual.

Removal and Insertion

Terminals Block can be added or removed with System Power applied only when no I/O Card is installed, and no field wiring is connected to the terminal.

A rotary keying system ensures compatibility between I/O cards and terminal blocks after installation is complete. The terminal block must have the keys set for the I/O card with which it is used.

Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

Other Safety Approvals

