

MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

ABB DRIVES

FMBT-21 3AXD50000049963

TWO-PORT MODBUS TCP ADAPTER

Used with the applicable ABB drive fieldbus adapters configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: ABB official manufacturer documentation

10 NONE – Start-up

Contents of this chapter	63
Warnings	63
Drive configuration	63
Connection configuration for the NONE protocol	63
FMBT-21 configuration parameters – group A (group 1)	64
Starting up fieldbus communication	70

11 NONE – Diagnostics

Contents of this chapter	71
Fault and warning messages	71
LEDs	71

12 Technical data

Contents of this chapter	73
FMBT-21	73
Ethernet link	74
TCP and UDP service ports	74

**13 Appendix A – ABB IP configuration tool for FMBT-21**

Contents of this chapter	77
Installation	77
Finding adapter modules in the network	77
Rewriting the IP configuration of adapter modules	78

14 Appendix B - Module configuration backup

Contents of this chapter	81
Compatibility	81
Settings for backup	81
Configuration backup for all protocols in FMBT-21	81

15 Appendix C - Replacing FENA-xx module with FMBT-21

Contents of this chapter	83
Compatibility	83
Automatic configuration process	83

16 Appendix D - FMBT-21 configuration web pages

Contents of this chapter	85
Browser requirements	85
Compatibility	85
Logging in	86
Menu overview	87
Status page	87
Configuration page	87
Service configuration page	90
Configuring SNTP	91
Configuring DHCP hostname	91
Security page	92
System use notification message editor	93

12


Technical data

Contents of this chapter

This chapter contains the technical specifications of the adapter module and the Ethernet link.

FMBT-21

The figure below shows the enclosure of the adapter module from the front and side.

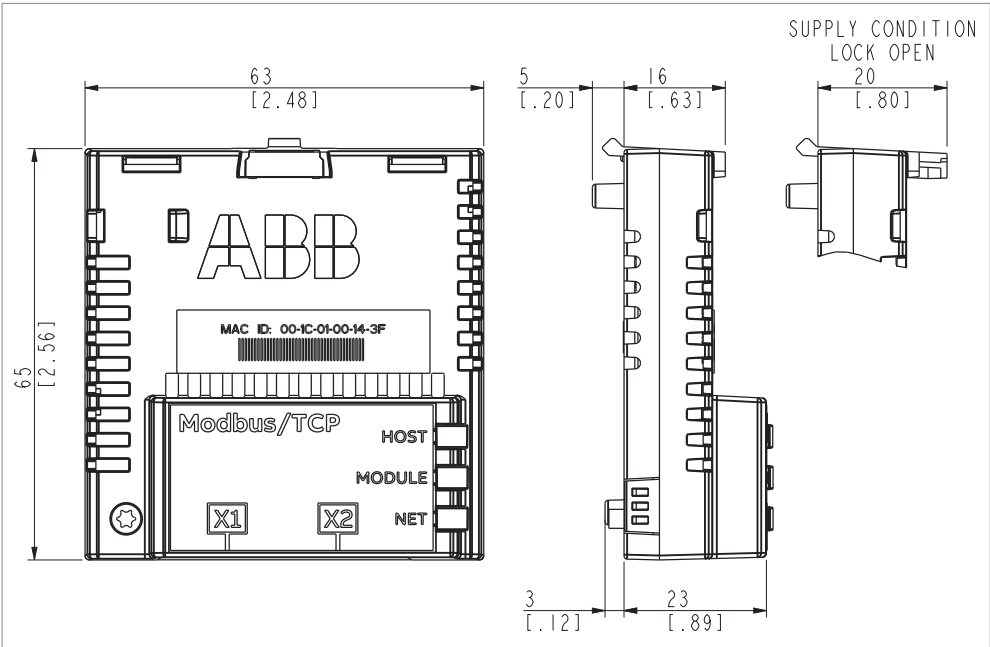

Installation	Into an option slot on the drive control unit
--------------	---

8 Table of contents

Password strength configuration	93
Support page	94
Password page	94
Firmware update page	95
Firmware update using the Drive Composer	96
Reset FMBT-21 web page password to default	97
Enable web page access if it is disabled	98

17 Appendix E - OPC UA server

Contents of this chapter	99
OPC UA	99
Compatibility	100
Supported services and features	100
Enabling OPC UA server on an ABB drive	101
Encrypted Communication	101
OPC UA subscription	102
Accessing drive events and event log with OPC UA	103
Connection example	104
Technical data	108

Further information

