

FIELD INSTALLATION QUICK GUIDE

Installation Instructions

IC693PBM200

PROFIBUS master module

[illegible]

PRODUCT	IC693PBM200
FAMILY	Series 90-30 communications
FUNCTION	PROFIBUS master module
STATUS	Verify exact installed equipment

Prepared by Amikon Limited from GE 90-30 Series PLC documentation. This guide supplements the complete manufacturer manual and site procedure.

01

CONFIRM THE ORDERED CONFIGURATION

Protocol	PROFIBUS DP-V1 master
Network Port	1 PROFIBUS port
Slave Devices	125 maximum
Baud Rate	9.6 kbit/s to 12 Mbit/s
Input Data	3,584 bytes maximum
Connector	9-pin D-sub

02

PREPARATION AND CONNECTION

- Confirm the complete IC693PBM200 article number and installed revision.
- Isolate applicable electrical and process energy using the approved site procedure.
- Record every connector, cable, terminal, shield and protective-earth connection before removal.
- Install without forcing keyed parts, then secure terminals, latches, fasteners and cable supports.

Contents

Overview and Specifications.....	1-1
PROFIBUS Information.....	1-1
Related Publications.....	1-1
Specifications.....	1-2
PROFIBUS Basics.....	1-3
PROFIBUS Network Overview.....	1-3
Bus Communication.....	1-3
Network Topology.....	1-4
Network Connectors.....	1-5
Installation.....	2-1
Reviewing System Power Requirements.....	2-1
Installing the PROFIBUS Module in the PLC Rack.....	2-1
Connecting the Master to the PROFIBUS Network.....	2-2
Network Segment Length.....	2-2
PROFIBUS Cable Types.....	2-3
Network Termination.....	2-4
Network Baud Rate.....	2-5
Removing the Module from the Rack.....	2-5
Configuration.....	3-1
Configuring the PROFIBUS Master Module.....	3-1
Parameters.....	3-2
Using Sync/Freeze Control.....	3-4
Configuring Network Settings for PROFIBUS Master.....	3-5
Adding Slave Devices to the IC693PBM200 Master.....	3-9
Adding Slaves and Modules.....	3-9
Configuring Module Data Areas.....	3-13
Data Area Parameters.....	3-13
Status and Diagnostics.....	4-1
PROFIBUS Module LED Indicators.....	4-2
Slave Status Bit Array.....	4-3
Slave Diagnostics/Firmware ID Array.....	4-3
PLC Fault Table Entries.....	4-4
Communication Requests.....	4-5
COMMREQ Ladder Instruction.....	4-5
Operation of the Communications Request.....	4-6
COMMREQ Programming Requirements and Recommendations.....	4-7
Error Detection and Handling.....	4-7
COMMREQ Status Word.....	4-8

04 COMMISSIONING CHECKS

- 01 Confirm product identity and mechanical seating.
- 02 Verify the documented supply before energising.
- 03 Inspect polarity, shielding and protective-earth connections.
- 04 Restore power in the approved sequence and observe status indications.
- 05 Test each connected input, output or communication path.
- 06 Record diagnostics and functional-test results before return to service.

05 CONTROLLED DOCUMENT

Official source	GE official manufacturer documentation
Product record	IC693PBM200
Manufacturer	GE 90-30 Series PLC
Warranty	12 months from AMIKON
Support	INFO@AMIKON.CN

AMIKON PRODUCT SUPPORT

+86-18020776786

INFO@AMIKON.CN

AMIKONG.COM