

MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

SIEMENS

C79458-L8001-A77

DUAL PROFIBUS PCI COMMUNICATION CARD

Used with the applicable SIMATIC NET CP5614 PCI configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: Siemens CP5613/CP5614 Product Information / Installation Instructions, S79220-A5814-X-05-7419, 08/2005; English applicable pages 37 to 46, 51 to 56, 68

SIMATIC NET

Product Information/ Installation Instructions

S79220-A5814-X-05-7419

Release 08/2005

CP 5613
CP 5614
CP 5613 FO
CP 5614 FO
CP 5613 A2
CP 5614 A2

6GK1561-3AA00
6GK1561-4AA00
6GK1561-3FA00
6GK1561-4FA00
6GK1561-3AA01
6GK1561-4AA01

This document contains information in English.

Classification of Safety-Related Notices

This document contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning triangle and are marked as follows according to the level of danger:



Danger

indicates that death or severe personal injury **will** result if proper precautions are not taken.



Warning

indicates that death or severe personal injury **can** result if proper precautions are not taken.



Caution

with a warning triangle indicates that minor personal injury can result if proper precautions are not taken.

Caution

without a warning triangle indicates that damage to property can result if proper precautions are not taken.

Notice

indicates that an undesirable result or status can occur if the relevant notice is ignored.

Note

highlights important information on the product, using the product, or part of the documentation that is of particular importance and that will be of benefit to the user.

Copyright Siemens AG, 1998 to 2005, All rights reserved

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility or design, are reserved.

Siemens AG
Bereich Automatisierungs- und Antriebstechnik
Geschäftsgebiet Industrie-Automatisierungssysteme
Postfach 48 48, D-90327 Nürnberg

Disclaimer

We have checked the contents of this manual for agreement with the hardware and software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual are reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcome.

S79220-A5814-X-05-7419
© Siemens AG 1998 to 2005
Technical details subject to change.

Trademarks

SIMATIC®, SIMATIC NET® and SINEC® are registered trademarks of Siemens AG.

Third parties using for their own purposes any other names in this document which refer to trademarks might infringe upon the rights of the trademark owners.

Safety Instructions Regarding your Product

Before you use the product described here, read the safety instructions below thoroughly.

Qualified Personnel

Only qualified personnel should be allowed to install and work on this equipment . Qualified persons are defined as persons who are authorized to commission, to ground, and to tag circuits, equipment, and systems in accordance with established safety practices and standards.

Correct Usage of Hardware Products

Please note the following regarding the correct usage of hardware products:

Caution

This device and its components may only be used for the applications described in the catalog or the technical description, and only in connection with devices or components from other manufacturers which have been approved or recommended by Siemens.

This product can only function correctly and safely if it is transported, stored, set up, and installed correctly, and operated and maintained as recommended.

Before you use the supplied sample programs or programs you have written yourself, make certain that no injury to persons nor damage to equipment can result in your plant or process.

EU Directive: Do not start up until you have established that the machine on which you intend to run this component complies with the directive 89/392/EEC.

Correct Usage of Software Products

Please note the following regarding the correct usage of software products:

Caution

This software may only be used for the applications described in the catalog or the technical description, and only in connection with software products, devices, or components from other manufacturers which have been approved or recommended by Siemens.

Before you use the supplied sample programs or programs you have written yourself, make certain that no injury to persons nor damage to equipment can result in your plant or process.

Prior to Startup

Before putting the product into operation, note the following warning:

Caution

Prior to startup you must observe the instructions in the relevant documentation. For ordering data of the documentation please refer to the catalogs or contact your local SIEMENS representative.

Contents

1	Introduction.....	42
2	Product Information	44
2.1	Overview of the Communications Processor Types.....	44
2.1.1	CP 5613	45
2.1.2	CP 5614	46
2.1.3	CP 5613 FO	47
2.1.4	CP 5614 FO	48
2.1.5	CP 5613 A2	49
2.1.6	CP 5614 A2	50
3	Installation Instructions	51
4	FAQ (Frequently Asked Questions).....	53
4.1	Questions Relating to all Types.....	53
4.2	CP 5613 and CP 5614.....	55
4.3	CP 5613 FO and CP 5614 FO.....	59
4.4	CP 5613 A2 and CP 5614 A2	63
4.5	Pinning of the PROFIBUS Port.....	66
5	Index	67
	Appendix 1: Notes on the CE Mark of SIMATIC NET Products.....	68
	Appendix 2: Declaration on Compliance with FCC Regulations	70

For information on technical support, contacts, and training, refer to the product information with the same title as a PDF file on the SIMATIC NET CD.

1 Introduction

SIMATIC NET CP 5613 and CP 5614 Communications Processors

Thank you for deciding to buy the SIMATIC NET CP 5613/CP 5614. You have acquired an innovative product that combines very fast S7, DP, DP-Base, and FMS access with easy installation.

Purpose of this Document

Apart from general product information, this document also describes how to install the following modules on programming devices/PCs.

- CP 5613
- CP 5614
- CP 5613 FO
- CP 5614 FO
- CP 5613 A2
- CP 5614 A2

Validity of the Product Information/Installation Instructions

This document is valid for the following hardware versions:

Name	Hardware Version
CP 5613	as of Version 5
CP 5614	as of Version 5
CP 5613 FO	as of Version 3
CP 5614 FO	as of Version 3
CP 5613 A2	as of Version 1
CP 5614 A2	as of Version 1

Product Documentation

You will find information on the use of this product in the following sources:

- Relevant paper documentation
- Text and PDF files on the SIMATIC NET CD
- HTML Document "Industrial Communication for PG/PC"
- The online help integrated in the software (F1 key)

Structure of the Documentation

- **Hardware (communications modules)**
 - **Product Information/Installation Instructions**
describes the installation of the CP 5613/CP 5614 communications modules.
- **Software (SIMATIC NET Products)**
 - **Product Information**
provides information on the product.
 - **Installation Instructions for the Software**
describes the installation of the SIMATIC NET products on the PG/PC.
 - **HTML Document "Industrial Communication for PG/PC"**
describes the basics of industrial communication with OPC,
commissioning with software tools,
configuration of the installed products,
OPC programming and the sample programs.

2 Product Information

2.1 Overview of the Communications Processor Types

Introduction

The following communications processors are described in this document:

- CP 5613
- CP 5614
- CP 5613 FO
- CP 5614 FO
- CP 5613 A2
- CP 5614 A2

2.1.1 CP 5613


Properties of the CP 5613

The CP 5613 is a PCI card for connecting PCs to PROFIBUS under Windows NT, Windows 2000, Windows XP and Windows Server 2003. The essential characteristics are as follows:

- Optimized for the fast DP master mode (DP-Base) with up to 124 DP slaves retaining full data consistency
- Event mechanisms to reduce load on the PC (automatic detection of data changes)
- Fast logic support independent of the application (automatic logical linking of input and output data can be set by the user program)
- Plug-and-Play support when installing the hardware
- All data transmission rates from 9.6 Kbps to 12 Mbps supported
- Floating RS-485 attachment

CP 5613

The picture below shows the CP 5613 communications processor.

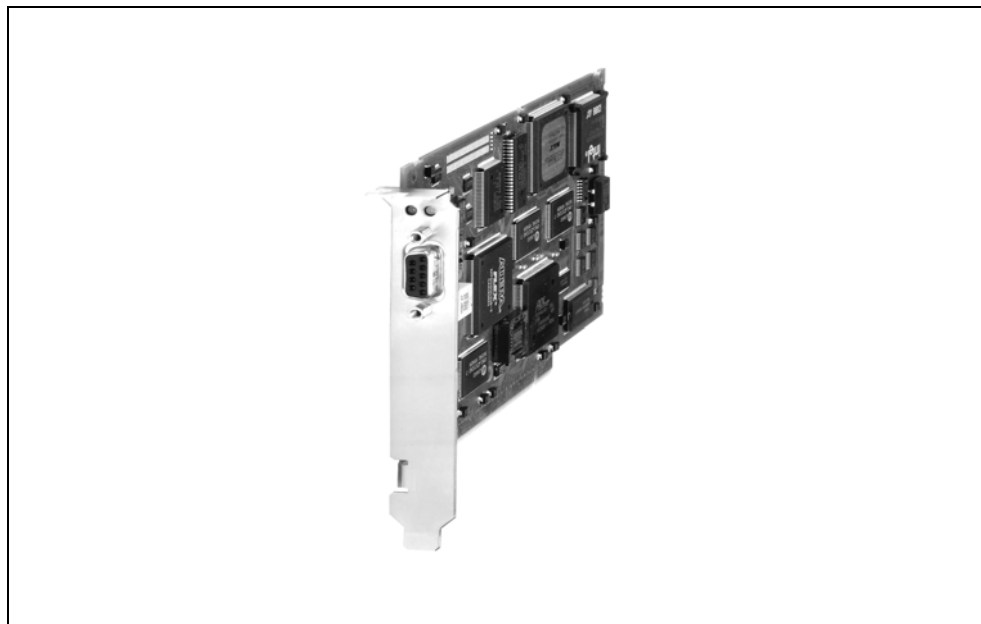

2.1.2 CP 5614

Properties of the CP 5614


The CP 5614 has the same characteristics as the CP 5613 but has the following extra features:

- Second RS-485 port for additional attachment of the CP as a DP slave to a second DP network.
- Program-controlled transfer of data between the master and slave module to allow the implementation of HIERARCHICAL PROFIBUS networks.
- DP master and DP slave can be operated at the same time.

CP 5614

The CP 5614 consists of a main board with an additional piggy-back board. Two PROFIBUS networks can be attached:

- PROFIBUS 1 (PB 1) - Master
- PROFIBUS 2 (PB 2) - Slave

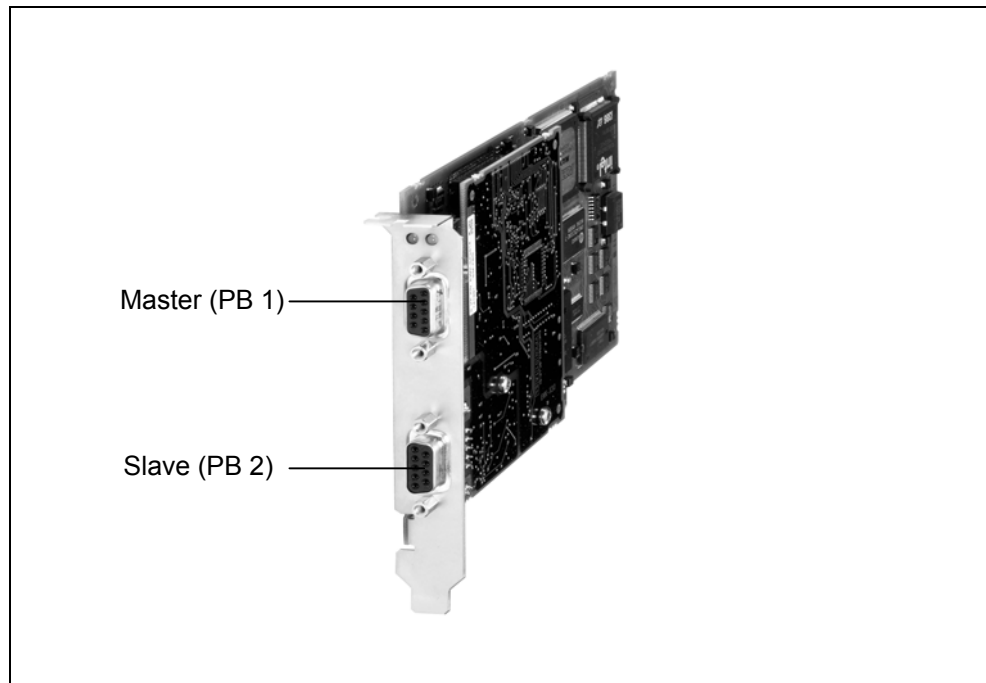

3 Installation Instructions

Procedure

Once you have installed the product software, install the CP 5613/CP 5614 modules as follows:

Step	Description
1	Make sure that you keep to the following rules for handling and installing modules (guidelines for avoiding ESD): • Do not touch components and pick up modules only by their edges. Do not touch the pins or conductors. • Before opening the computer, make sure that you discharge any electrostatic charge from your body. You can do this by touching metal parts on the back panel of the computer before unplugging the power supply cable. • Make sure that you also discharge any electrostatic charge from tools you intend to use inside the computer. • Components and modules must only be inserted or removed when the power supply is off. • Do not operate the computer with the housing open. • Read any sections in the manual of your computer relating to the operation of modules on the PCI bus.
2	Turn off your computer and disconnect all the cables.
3	Open the computer as described in the computer manual.
4	Make sure that the following conditions are met: • A PCI slot is free. (For more detailed information on the requirements of the PCI slot, refer to Chapter 4.) • Make sure that your PC is powerful enough, in other words, at least a 266 MHz Pentium II processor and at least 256 Mbytes of memory. • Check that you have the required resources as described in Chapter 4.
5	Insert the module in one of the free PCI or PCI-X slots on the mother board; PCI-X slots only for the CP 5613 A2 or CP 5614 A2.

Steps continued on following page

Steps continued from previous page

6	Secure the module and close your computer as described in the manual for your computer.
7	Reconnect all the cables to the computer except for the PROFIBUS cable(s) and turn on your computer.
8	Read the information in the document "Commissioning PC Stations".

Note 1

There are no hardware settings necessary on the module itself.

Note 2

If a module is inserted in a module slot, that is designed for a higher clock rate than the module, the clock rate adapts to the inserted module.

CP 5613 A2 and CP 5614 A2 are designed for a 66 MHz PCI bus clock rate.

If the CP 5613 A2 or CP 5614 A2 is operated in a PCI-X slot, the bus clock rate in this PCI-X segment is automatically reduced to 66 MHz.

With the CP 5613 and CP 5614 communications processors, the PCI bus clock rate must not exceed a maximum of 33 MHz.

(If the bus of your PC has a clock speed of 66 MHz or faster, this clock speed is automatically reduced to 33 MHz by installing the CP 5613 or CP 5614.)

The bus clock rate of the CP 5613 A2 or CP 5614 A2 is also reduced to 33 MHz if there is another module on the same bus that can only operate at 33 MHz.

Notice 1

CP 5613 and CP 5614 cannot be operated in a PCI-X slot.

Notice 2

The communications processors CP 5613 A2 and CP 5614 A2 can be operated as of SIMATIC NET CD 11/2003 (V6.2).

4 FAQ (Frequently Asked Questions)

Overview

In this chapter, you will find the answers to typical questions (Frequently Asked Questions) about product properties.

4.1 Questions Relating to all Types

What do the LEDs mean?

Green and yellow LED	Meaning
green lit	DP master: Indicates token rotation (in other words, normal operation)
green off	DP master: Incorrect bus parameters, defective bus, or CP not in operation
green flashing at one second intervals	DP master: Errors in database
green and yellow flashing alternately	Module being addressed by the diagnostic tool to check the installation.
yellow lit	DP slave: Indicates polling by the DP master (in other words, normal operation)
yellow off	DP slave: Port not being addressed.
Extra on the CP 5613 A2 and CP 5614 A2:	
green flashing fast	Module not started (normal state after reset).
green and yellow flashing synchronously	Exception state (error in firmware)
one of the two LEDs is on the other flashes fast.	Error initializing the module.

Does the module have the CE mark?

Yes, refer to the Appendix, page 68.

Which approvals do the CP 5613, CP 5614, CP 5613 FO and CP 5614 FO have for USA and Canada?

The modules have the following approvals for the USA and Canada:

- Underwriters Laboratories (UL) complying with Standard UL 1950 UL Recognition Mark
- Canadian Standard Association (CSA) complying with Standard C 22.2 No 950
- FCC Class A

Which approvals do the CP 5613 A2 and CP 5614 A2 have for USA and Canada?

- cULus — Combined UL and CSA approval
- FCC Class B

4.2 CP 5613 and CP 5614

What are the technical specifications of the CP 5613 and CP 5614 modules?

Physical Values	Values
Dimensions	Short PCI module format (107 x 168 mm)
Weight	120 g for CP 5613, 170 g for CP 5614
Module insertion principle	PCI bus direct connect (5 V, 32 bits)
Bus interface	PCI V2.1, Plug and Play

Electrical Values	Values
Power supply from PCI slot	Safety extra-low voltage (SELV) complying with EN 60950 +5 V DC +/- 5%
Current consumption from PCI slot	CP 5613 typical: 1.4 A CP 5614 typical: 1.6 A

Safety	Values
VDE directive	VDE 0805 = EN 60950 and IEC 950
Approvals	- UL approval: UL 1950 - CSA approval: CSA C 22.2 no. 950

PROFIBUS	Values
Connector to PROFIBUS	9-pin sub D female connector with screw locking mechanism. (The CP 5614 has two interfaces. Due to lack of space, no angled bus connectors can be used.) The following network components are recommended for attachment to PROFIBUS: • Bus connector RS 485, order number 6GK1500-0EA01 • Bus terminal 12M, order number 6GK1500-0AA10
Type of transmission	RS 485 floating within the SELV limits
Supported data transmission rates	9,6 Kbps 19,2 Kbps 45,45 Kbps 93,75 Kbps 187,5 Kbps 500,0 Kbps 1,5 Mbps 3,0 Mbps 6,0 Mbps 12,0 Mbps
Mode of the PROFIBUS interface	Floating (interface signals) Non-floating (cable shield)
PROFIBUS controller used	• CP 5613/CP 5614 Master: ASPC2 Step E2 • CP 5614 Slave: DPC31

Notes on the CE Mark of SIMATIC NET Products

Product Name:

SIMATIC NET, CP 5613	C79458-L8000-A77
SIMATIC NET, CP 5614	C79458-L8001-A77
SIMATIC NET, CP 5613 FO	A5E00047996
SIMATIC NET, CP 5614 FO	A5E00047997
SIMATIC NET, CP 5613 A2	6GK1561-3AA01
SIMATIC NET, CP 5614 A2	6GK1561-4AA01

EMC Directive



The SIMATIC NET products listed above meet the requirements of the following EU directive:

89/336/EEC "Electromagnetic Compatibility"

Area of Application

The products are designed for use in the following areas:

Area of Application	Requirements	
	Noise emission	Noise immunity
Household, commercial, light industry	EN 50081-1 : 1992	EN 50082-1 : 1997
Industry	EN 50081-2 : 1993	EN 50082-2 : 1995

Installation Guidelines

The product meets the requirements providing you adhere to the guidelines for installation and safety described in this Section "Notes on the CE Mark" and in the following documentation:

SIMATIC NET, PROFIBUS Networks, manual