

MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

SANTAK

730-80141-00P

AS400 DRY-CONTACT COMMUNICATION CARD

Used with the applicable Santak Castle UPS accessory platform configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT


Selected official manufacturer pages follow this cover.

Source: Santak Castle C1-3K UPS User Manual

客服热线: 400-830-3938 800-830-3938

CASTLE 系列
C1K-3K UPS

使用手册
USER MANUAL

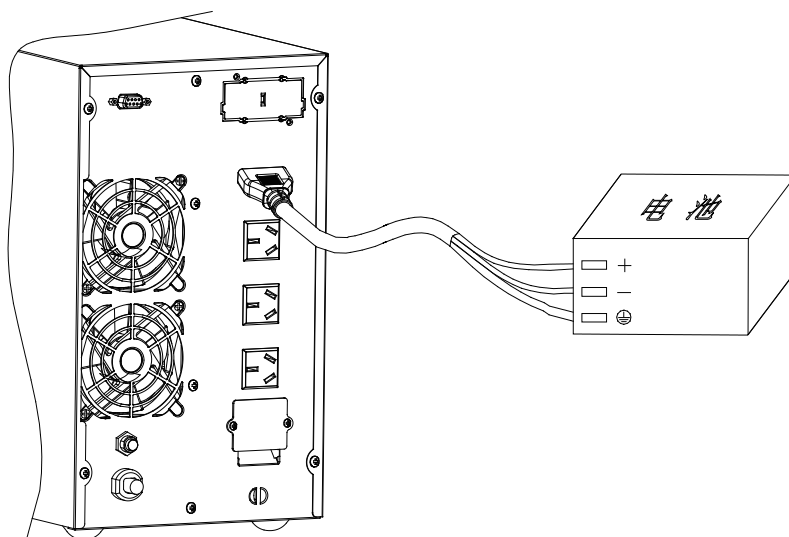


长效型UPS电池连接示意图



注意：电池连接线为标准配置,如果客户需要更长的电池连接线，请咨询经销商。电池连接线不可无限加长，否则会影响UPS 的正常使用。


2.3.3 连接通讯线

1. 一般通讯连接

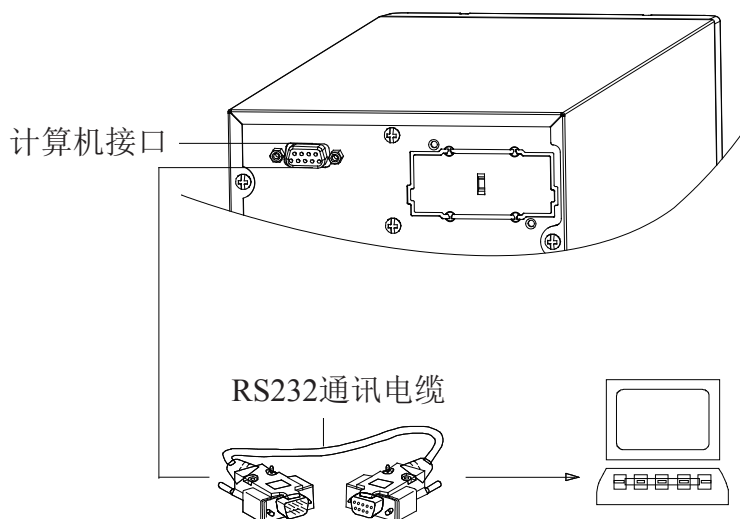

计算机接口：通过通讯电缆(用户配备的标准直通线,脚位一一对应的RS232串口线)连接UPS与监控设备。可使用山特图形化的WinPower监控软件(可从山特网站免费下载)。

2. 选用通讯连接

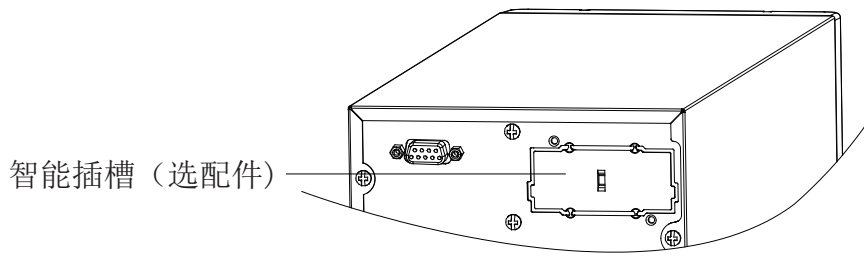

智能插槽：可选装AS400卡、NMC卡或CMC卡任意一种

a—AS400卡：可直接利用有AS400接口系统的监控功能，对电源进行监控管理。

b—NMC卡：通过Internet实现对UPS的远程监控管理。

c—CMC卡：集中监控卡。

注意：




- 智能插槽及监控卡需通过代理商购买，安装方法请参照智能插槽包装内的安装说明。
 - WinPower 软件及AS400、NMC、CMC卡的使用请参考其他相关资料，如果对上述接口的使用有疑问，请联络山特客服中心。
 - 智能插槽适配卡分长卡与短卡，本手册描述的机种需匹配短卡使用。
-

选配件料号参考如下：

选配件	料号
智能插槽选件	730-80405-00P
AS400卡	730-80141-00P 短卡
NMC卡	730-80349-00P 短卡
CMC卡	730-80100-00P 短卡

3、运行操作

3.1 操作显示面板

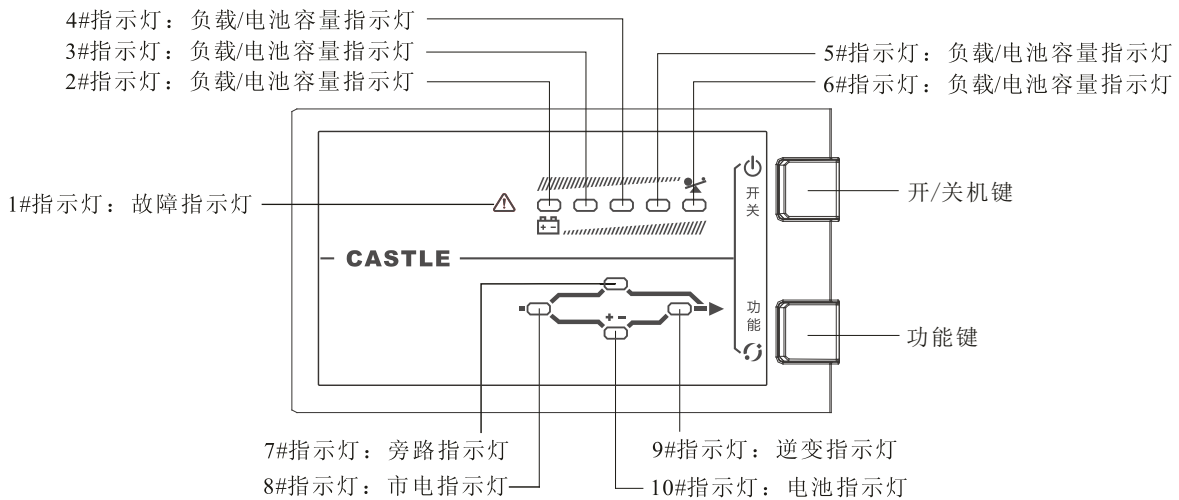

操作显示面板

1、开/关机键

开/关机键的主要功能为：

开机：按开/关机键1秒以上即可开机，开机成功UPS会发出一声鸣叫。

关机：当UPS处于市电模式、电池模式时，按开/关机键1秒以上即可关机。

清除故障：按开/关机键3秒以上即可清除故障状态。

2、功能键

功能键的主要功能为：

电池自检：在市电模式下，按功能键2秒以上可启动电池自检，执行电池自检操作。

电池模式下的消音：按功能键2秒可消除电池模式下的告警声，再持续按功能键2秒以上，告警音恢复。

所有模式下的消音：持续按功能键10秒以上实现静音功能，再持续按功能键10秒以上，告警音恢复。按键音与电池放电截止电压告警声（一秒一叫）不在静音范围内。

3、LED 指示灯

包括故障指示灯、负载/ 电池容量指示灯、旁路指示灯、市电指示灯、逆变指示灯、电池指示灯。