MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

YOKOGAWA

ANT512-10 S1

OPTICAL ESB BUS REPEATER SLAVE MODULE

Used with the applicable CENTUM VP configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: Yokogawa GS 33K50F52-50E

General Specifications

GS 33K50F52-50E

Models ANT411, ANT512
Optical ESB Bus Repeater
Module for 5 km to 50 km
(for AFV30☐/AFV40☐)

[Release 5]

■ GENERAL

The Optical ESB Bus Repeater Module for 5 km to 50 km converts the ESB bus to an optical signal and transmits it. The ESB bus transmission distance can be extended within the range from 5 km to 50 km by connecting the ANT411 Optical ESB Bus Repeater Master Module and ANT512 Optical ESB Bus Repeater Slave Module with an optical fiber cable.

● ANT411 Optical ESB Bus Repeater Master Module for 5 km to 50 km

This module can be installed in the Field Control Unit (AFV30☐/AFV40☐), Unit for Optical ESB Bus Repeater Module (ANT10U), ESB Bus Node Unit (ANB10☐), and Optical ESB Bus Node Unit (ANB11☐).

To connect the ANT411 to the ESB bus, specify “Connector unit for ESB Bus” (option code “/CU1N”). To terminate the ESB bus at the ANT411, specify “Connector unit with terminator for ESB Bus” (option code “/CU1T”).

● ANT512 Optical ESB Bus Repeater Slave Module for 5 km to 50 km

ANT502 or ANT512 are installed as standard in the Optical ESB Bus Node Unit (ANB11☐) as a slave module of the optical ESB bus. It can also be installed in the Unit for Optical ESB Bus Repeater Module (ANT10U).

To connect the ANT512 to the ESB bus, specify “Connector unit with ESB Bus connector” (option code “/BU1A” or “HU1A”). To not connect the ANT512 to the ESB bus, specify “Connector unit” (option code “/BU1B” or “/HU1B”).

To monitor the temperatures and fans in the cabinet, specify “With HKU interface” (option code “/HU1A” or “/HU1B”).

● Installation Position

The following table shows the units and numbers of slots in which the ANT411 and the ANT512 can be installed.

For the installation positions corresponding to the slot numbers, see “FIO System Overview (for Vnet/IP)” (GS33K50F10-50E).

Table ANT411 Optical ESB Bus Repeater Master Module for 5 km to 50 km

	Installable Unit and Slot Number		
	AFV30☐, AFV40☐	**ANB10☐, ANB11☐**	**ANT10U**
Single configuration (*1)	IO1, 3, 5	IO1, 3, 5, 7	IO1, 3, 5, 7, B1
Dual-redundant configuration (*2)	IO1 to 6	IO1 to 8	IO1 to 8, B1, 2

*1: A dummy cover is to be attached to the even-numbered slot of a pair of slots in which the module is installed.
*2: Install the module in the slots with the following numbers: IO1-2, IO3-4, IO5-6, IO7-8, and B1-2

Table ANT512 Optical ESB Bus Repeater Slave Module for 5 km to 50 km

	Installable Unit and Slot Number	
	ANB11☐	**ANT10U**
Single configuration (*1)	B1	IO1, 3, 5, 7, B1
Dual-redundant configuration (*2)	B1, 2	IO1 to 8, B1, 2

*1: A dummy cover is to be attached to the even-numbered slot of a pair of slots in which the module is installed.
*2: Install the module in the slots with the following numbers: IO1-2, IO3-4, IO5-6, IO7-8, and B1-2

YOKOGAWA

Yokogawa Electric Corporation
2-9-32, Nakacho, Musashino-shi, Tokyo, 180-8750 Japan
Tel.: 81-422-52-5634 Fax.: 81-422-52-9802

GS 33K50F52-50E
©Copyright Aug. 2011 (YK)
4th Edition Feb. 1, 2014 (YK)

■ STANDARD SPECIFICATIONS

Function: ESB bus optical transport
Connection type: chain type connection and star type connection
Maximum number of connectable stages: 2 (for chain type connection)
Maximum number of connection (*1): 8 (for chain type and star type connection)
Maximum transmission distance: 5 km to 50 km (when using ANT411, ANT512, and ANB11☐)
Current consumption: 0.5 A (for ANT411/ANT512)
Weight: 0.25 kg (main body only) (for ANT411/ANT512)

*1: The number of paired connection between ANT411 and ANT512.

● Optical Fiber Cable Specifications

		Optical fiber specifications
Optical connector type		LC (compliant with IEC61754-20)
Max. Permissible Optical Loss		3 to 16 dB at 1.55 µm (*1)
Optical fiber	**Type**	Quartz single-mode optical fiber (*2)
	Required number of cores	2
	Max. Length	50 km

*1: When the optical attenuation between the ANT411 and ANT512 is less than 3 dB, use the attenuator to reduce the attenuation by 3 dB.
*2: JIS C 6835 SSMA -9.3/125 or IEC 60793-2-50 B1.1 type

● HKU Interface (ANT512 Option)


When ANT512's option code /HU1A or /HU1B is specified, the environmental information of the cabinet where the modules are installed can be transmitted to FCU via optical ESB bus.

The FCU monitors the connected cabinet's environmental conditions and displays HKU's operating status as well as system alarm on HIS.


All Rights Reserved. Copyright © 2011, Yokogawa Electric Corporation

● Optical ESB Bus Repeater Slave Module for 5 km to 50 km (ANT512)


Unit: mm




ANT512-10/HU1A
(Connector unit with ESB Bus connector and HKU I/F)




ANT512-10/HU1B
(Connector unit with HKU I/F)



ANT512-10/BU1A
(Connector unit with ESB Bus connector)



ANT512-10/BU1B
(Connector unit)

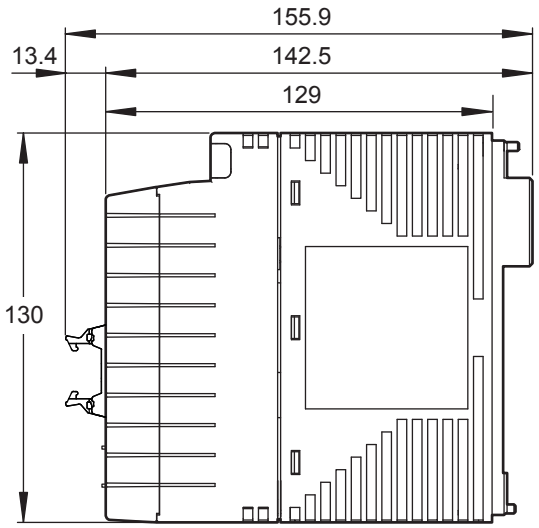

*The side view is of ANT512-10/HU1B
(Connector unit with HKU interface).

F02E.ai

All Rights Reserved. Copyright © 2011, Yokogawa Electric Corporation