MANUFACTURER DOCUMENT PACKAGE

Manufacturer's Manual

Reference package for procurement and maintenance review

SIEMENS

6GT2398-1AF00

RS422 RFID READ/WRITE UNIT

Used with the applicable MOBY E SLG 75 configuration.

REFERENCE PACKAGE

OFFICIAL DOCUMENT

Selected official manufacturer pages follow this cover.

Source: Siemens MOBY E Configuration, Installation and Service Manual J31069-D0105-U001-A7-7618; SLG 75 ordering, technical and installation pages.

SIEMENS

MOBY® E

Configuration, Installation and Service

Manual

Table of Contents

General 1

Introduction – MOBY E 2

Configuration and Mounting Guidelines 3

Mobile Data Memories 4

Read/Write Devices Read/Write Antennas 5

Interfaces 6

Accessories 7

Documentation A

Error Messages B

ASCII Table C

Compatibility D

6GT2 397-4BA00-0EA2

Published in April 2005

Safety Guidelines

This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning triangle and are marked as follows according to the level of danger:



Danger

indicates that death, severe personal injury or substantial property damage will result if proper precautions are not taken.



Warning

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.



Caution

indicates that minor personal injury or property damage can result if proper precautions are not taken.

Caution

indicates that property damage can result if proper precautions are not taken.

Note

draws your attention to particularly important information on the product, handling the product, or to a particular part of the documentation.

Qualified Personnel

The device/system may only be set up and operated in conjunction with this manual.

Only **qualified personnel** should be allowed to install and work on this equipment. Qualified persons are defined as persons who are authorized to commission, to ground, and to tag circuits, equipment, and systems in accordance with established safety practices and standards.

Correct Usage

Note the following:



Warning

This device and its components may only be used for the applications described in the catalog or the technical description, and only in connection with devices or components from other manufacturers which have been approved or recommended by Siemens.

This product can only function correctly and safely if it is transported, stored, set up, and installed correctly, and operated and maintained as recommended.

Trademarks

MOBY®, SIMATIC® and SINEC® are trademarks of SIEMENS AG.

Some of the other designations used in these documents are also registered trademarks; the owner's rights may be violated if they are used by third parties for their own purposes.

Copyright © Siemens AG 1997 All rights reserved

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Siemens AG
Automation and Drives
Special Products, Projects Automotive Industry, Training
P.O. Box 4848, D-90327 Nuernberg

Disclaimer of Liability

We have checked the contents of this manual for agreement with the hardware and software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual are reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcomed.

© Siemens AG 1997, 1998, 1999, 2000, 2002, 2003, 2005
Technical data subject to change.

Siemens Aktiengesellschaft

Order No. 6GT2 397-4BA00-0EA2

5.3 SLG 75

Application area SLG 75

The SLG 75 ANT is a read/write device in the middle of the performance range. It can only be used with ANT 1, ANT 4, ANT 12, ANT 18 and ANT 30. The antennas can be very easily positioned for any application. The cable between the antenna and evaluation unit is 3 m long. The length cannot be changed.
The antenna cable can be connected on the SLG side.
The SLG 75 can be operated at the following interfaces:
ASM 400, ASM 410, ASM 424, ASM 450, ASM 452, ASM 454, ASM 470, ASM 473 and ASM 475.



Figure 5-6 Read/write device SLG 75

Areas of application of the antennas

ANT 1

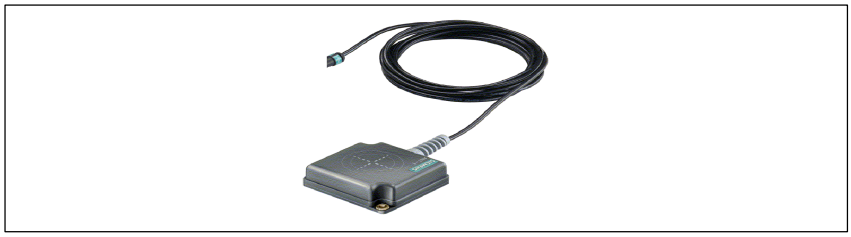


Figure 5-7 ANT 1 for SLG 75

The ANT 1 is an antenna in the middle of the performance range which is very useful in production plants and assembly lines because of its easily handled housing.
The antenna's dimensions make it possible to read/write large volumes of data from/to the MDS during operation. The antenna cable can be connected on the SLG side.

ANT 4

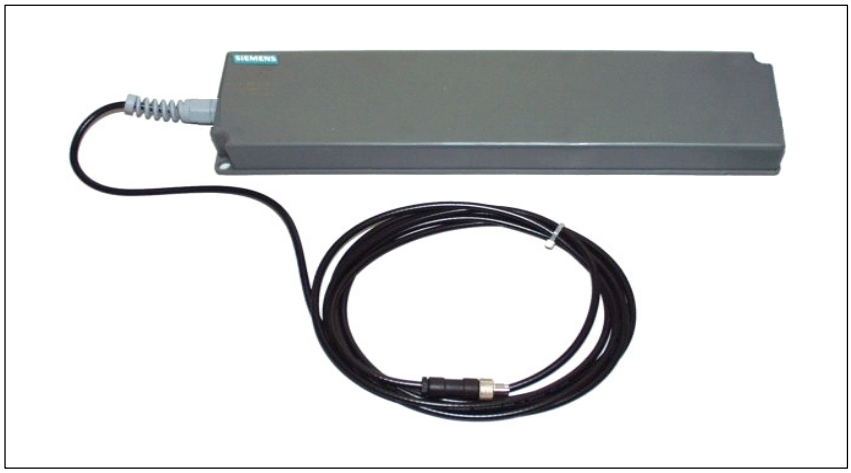


Figure 5-8 ANT 4 for SLG 75

The ANT 4 was specially conceived for use in manufacturing plans and assembly lines.
Due to its wide transmission area, the antenna can be used every where high speeds are required. The cable length between the antenna and the evaluating processor unit is 1 m and is connected to the electronics side.

ANT 12



Figure 5-9 ANT 12 for the SLG 75

The ANT 12 is intended primarily for tool identification. The very small size of the antenna permits very accurate positioning using the plastic nuts included with it. The antenna cable can be connected on the SLG side. Data carrier communication is only possible with the MDS E623 (tool pill) in static mode.

ANT 18

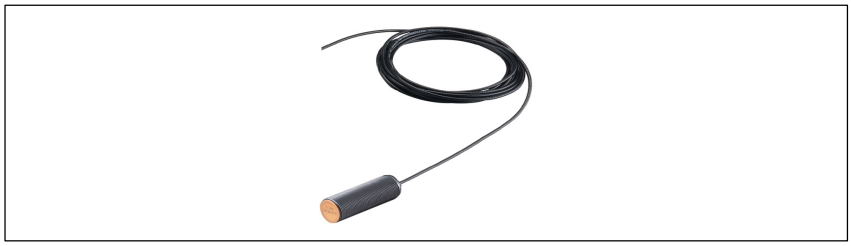


Figure 5-10 ANT 18 for the SLG 75

The ANT 18 was designed primarily for use in small assembly lines. The small, compact dimensions of the antenna with its two plastic nuts (included with the product) make it easy to position for any application. The antenna cable can be connected on the SLG side. Data carrier communication is only possible with the MDS E624 in static mode.

ANT 30

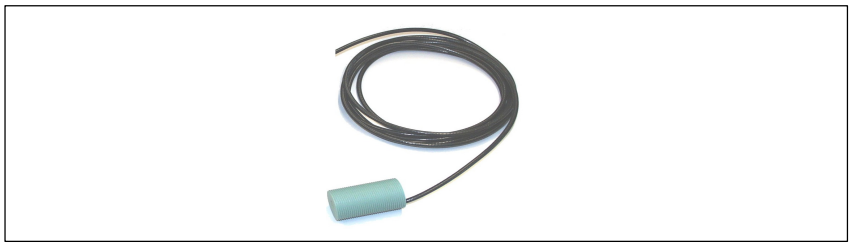


Figure 5-11 ANT 30 for the SLG 75

The ANT 30 was designed primarily for use in small assembly lines. The maximum read/write range is approximately 60% greater than the ANT 18. The compact dimensions of antenna with its two plastic nuts (included with the product) make it very easy to position for any application. The antenna cable can be connected on the SLG side. Data carrier communication is only possible with the MDS E624 in static mode.

Ordering data

Table 5-5 Ordering data for the SLG 75 and ANT xx

SLG 75 write/read device with RS 422 serial interface The antenna is not included with the SLG 75 and must be ordered separately.		6GT2 398-1AF00
Antennas:		
ANT 1	75 x 75 x 20 (L x W x H)	6GT2 398-1CB00
ANT 4	320 x 80 x 30 (L x W x H)	6GT2 398-1CE00
ANT 4	320 x 80 x 30 (L x W x H)	6GT2 398-1CE00-0AX0[1]
ANT 12	M12 x 1.0 x 40 (∅ x wght x L)	6GT2 398-1CC00
ANT 18	M18 x 1.0 x 55 (∅ x wght x L)	6GT2 398-1CA00
ANT 30	M30 x 1.5 x 58 (∅ x wght x L)	6GT2 398-1CD00
SLG connector and plug-in line		See Section 3.7

1 with antenna cable with hose

Technical data

Table 5-6 Technical data of the SLG 75

Read/write device	SLG 75
Inductive interface to MDS	
ANT-MDS read/write distances	See field data
Transmission frequency	13.56 MHz
Serial interface to ASM	RS 422
Data transmission speed	19200 Baud
Max. ASM - SLG cable length (with 24 V DC and a conductor cross-section of 0.2 mm^2)	120 m
Max. data cable length. See cable configuration in Table 3-14.	1000 m
MDS addressing command	Direct access via addresses Initialize MDS, read data from MDS, write data to MDS
Supply voltage (via serial interface)	
Nominal value Permissible range	24 V DC 20 to 30 V DC
Current consumption	
Switch-on current (brief) Operation (at 24 V DC)	Max. of 700 mA 180 mA (typical)
MTBF (at +40 °C)	2.5 x 10^5 hours
Housing	
Dimensions (in mm)	
Electronics w/o connectors (L x W x H)	160 x 80 x 40
Color	Anthracite
Material	Plastic (PA 12)
Connector	
Data	6-pin SLG connector in accordance with DIN 43651 (pin, device side)
Protection rating in accordance with EN 60529	IP65
Vibration in accordance with EN 60721-3-7/class 7M2	30 g[1]
Vibration in accordance with EN 60721-3-7/class 7M2	1 g (3 to 200 Hz)[1] 1.5 g (200 to 500 Hz)[1]
Mounting of SLG	2 M5 screws
Tightening torque at room temperature	≤ 3 Nm
Ambient temperature During operation During transportation and storage	 –25 °C to + 70 °C –40 °C to + 85 °C
Weight (approx.)	520 g
Certification	CE, UL/CSA, FCC

1 **Warning:** The values for shock and vibration are maximum values and must not occur continuously.

Table 5-7 Technical data of the antennas

Antenna	ANT 1	ANT 4	ANT 12	ANT 18	ANT 30
Write/read distance, max. ANT-MDS (S_g).	100 mm	100 mm	5 mm	15 mm	24 mm
Housing dimensions in mm	75 x 75 x 20 (L x W x H)	320 x 80 x 30 (L x W x H)	M12 x 1.0 x 40 (∅ x wght x L)	M18 x 1.0 x 55 (∅ x wght x L)	M30 x 1.5 x 58 (∅ x wght x L)
Color	Anthracite		Pastel turquoise		
Material	Plastic (PA 12)		Plastic Crastin		
Connector	4-pin pin, antenna side				
Antenna line length	3 m	1 m	3 m		
Protection rating in accordance with EN 60529	IP67		IP67 (front)		
Vibration in accordance with EN 60721-3-7/class 7M2 Vibration in accordance with EN 60721-3-7/class 7M2	50 g[1] 20 g (3 to 500 Hz)[1]				
Mounting of antenna	2 M5 screws		2 plastic nuts M12 x 1.0	2 plastic nuts M18 x 1.0	2 plastic nuts M30 x 1.5
Ambient temperature During operation During transportation and storage	 –25 °C to +70 °C –40 °C to +85 °C				
MTBF (at +40 °C)	2.5 x 10^5 hours				
Weight (approx.)	80 g	950 g	45 g	120 g	150 g

1 **Warning:** The values for shock and vibration are maximum values and must not occur continuously.

Cores to the SLG 75

Notes on mounting for split toroidal cores

Connect the 2 split toroidal cores included with the SLG 75 (order number 6GT2 398-1AF00) just behind the ASM plug connector if you are using standard SLG stub lines (see table 5-10) or cables which have made youself.

1. Close the plastic ferrite shells over the connecting cable.
2. Secure the ferrite shells using a cable binder to prevent them slipping (see Figure 5-33)

Table 5-10 Standard connecting cables which will take split toroidal cores

Connecting cables	Ordering number
SLG 75 – ASM 400/424/454	6GT2 091-0A...[1] 6GT2 091-2A...[1]
SLG 75 – ASM 410	6GT2 091-0D...[1] 6GT2 091-2D...[1]
SLG 75 – ASM 450/452/473	6GT2 091-1C...[1] 6GT2 091-2C...[1]
SLG 75 – ASM 470/475	6GT2 091-0E...[1] 6GT2 091-2E...[1]

1 For cable lengths, see chap. 3.7.4.

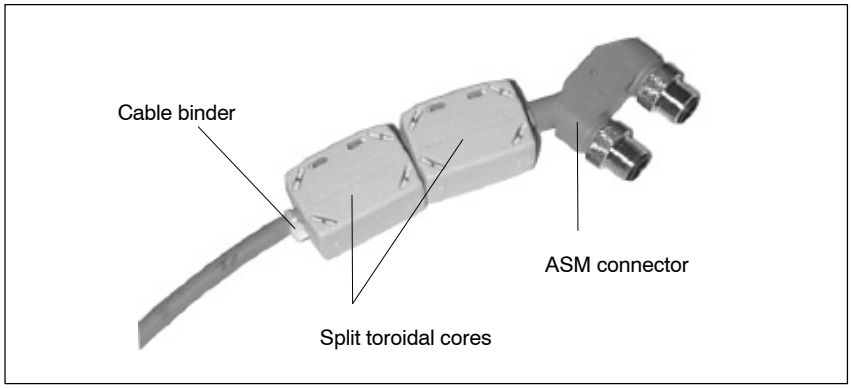


Figure 5-33 ASM 450 connecting cables with split toroidal cores (example)

Note

If your cables have diameters greater than 8 mm, please contact **Customer Support**:

Telephone: +49 (180) 5050-222

Fax: +49 (180) 5050-223

E-Mail: adsupport@siemens.com

Internet: http://www.siemens.com/automation/service&support