


FIELD INSTALLATION QUICK GUIDE

Installation Instructions

Siemens 6ED1055-1CB00-0BA2

LOGO! DM8 24 expansion module

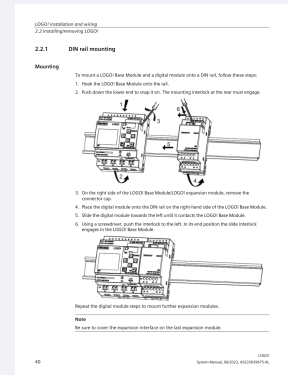

PRODUCT	6ED1055-1CB00-0BA2
FAMILY	LOGO! 8 digital expansion
FUNCTION	LOGO! DM8 24 expansion module
STATUS	Verify exact configuration

Prepared by Amikon Limited from Siemens A5E33039675-AL; exact-article technical data. This guide does not replace the complete manufacturer manual, site procedure, hazardous-area drawing, or approval document.

01 CONFIRM THE ORDERED CONFIGURATION

Supply voltage	24 V DC; permissible range 20.4-28.8 V DC
Digital inputs	4 non-isolated digital inputs
Input thresholds	Low <5 V DC; high >12 V DC
Input current	High typ. 2.1 mA; low max. 0.88 mA
Input delay	Rising and falling max. 1.5 ms
Digital outputs	4 sourcing transistors; max. 0.3 A per channel
Output protection	Short-circuit and overload protection

02 MOUNTING AND CONNECTION

- Qualified personnel: isolate all module and load supplies before installation.
- Mount on 35 mm DIN rail; reserve 35.5 mm width and required clearances.
- Apply 20.4-28.8 V DC and observe common-reference requirements.
- Limit each sourcing output to 0.3 A; do not parallel outputs for more current.
- Latch the expansion slide; power expansions before or with the base module.

OFFICIAL INSTALLATION REFERENCE

LOGO! installation and wiring


2.2 Installing/removing LOGO!

2.2.1 DIN rail mounting


Mounting

To mount a LOGO! Base Module and a digital module onto a DIN rail, follow these steps:

1. Hook the LOGO! Base Module onto the rail.
2. Push down the lower end to snap it on. The mounting interlock at the rear must engage.

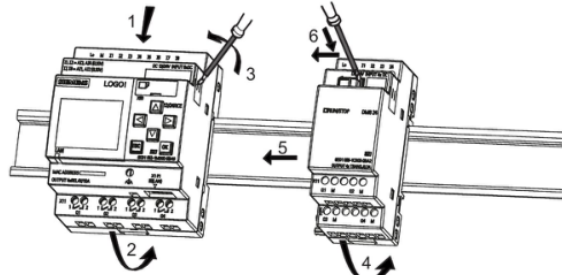

3. On the right side of the LOGO! Base Module/LOGO! expansion module, remove the connector cap.
4. Place the digital module onto the DIN rail on the right-hand side of the LOGO! Base Module.
5. Slide the digital module towards the left until it contacts the LOGO! Base Module.
6. Using a screwdriver, push the interlock to the left. In its end position the slide interlock engages in the LOGO! Base Module.

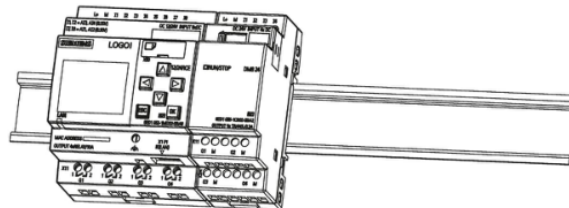

Repeat the digital module steps to mount further expansion modules.

Note

Be sure to cover the expansion interface on the last expansion module.

Official manufacturer reference reproduced from Siemens A5E33039675-AL; exact-article technical data. Use the current source document and all referenced drawings and notes for installation.

04

CABLE ROUTING AND CONNECTION

- Mount on 35 mm DIN rail; reserve 35.5 mm width and required clearances.
- Apply 20.4-28.8 V DC and observe common-reference requirements.
- Limit each sourcing output to 0.3 A; do not parallel outputs for more current.
- Latch the expansion slide; power expansions before or with the base module.
- Verify RUN indication and test every assigned input and output before service.

05

INITIAL SYSTEM CHECKS

- Confirm model identity and compatible system components before energizing.
- Verify wiring, grounding, enclosure, and applicable hazardous-area requirements.
- Confirm green RUN status and correct operation of all assigned I/O.
- Record the installed order number and baseline operating condition.

06

CONTROLLED DOCUMENTS

Official source	Siemens A5E33039675-AL; exact-article technical data
Product record	6ED1055-1CB00-0BA2
Manufacturer	Siemens
Support	INFO@AMIKON.CN