


FIELD INSTALLATION QUICK GUIDE

Installation Instructions

330750-80-05

high-temperature velocity transducer system

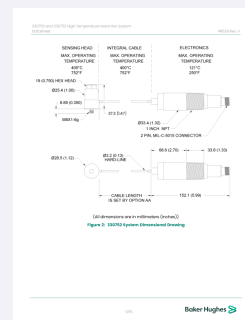

PRODUCT	330750-80-05
FAMILY	330750 and 330752 high-temperature Velomitor systems
FUNCTION	high-temperature velocity transducer system
STATUS	Verify exact installed equipment

Prepared by Amikon Limited from 330750 and 330752 High Temperature Velomitor documentation. This guide supplements the complete manufacturer manual and site procedure.

01

CONFIRM THE ORDERED CONFIGURATION

Integral Cable Length	8 m
Approval Option	Multiple approvals
Measurement Type	Casing vibration velocity
Sensitivity	5.7 mV/mm/s nominal
Frequency Response	15 Hz to 2 kHz
Maximum Velocity	635 mm/s peak below 680 Hz

02


PREPARATION AND CONNECTION

- Confirm the complete 330750-80-05 article number and installed revision.
- Isolate applicable electrical and process energy using the approved site procedure.
- Record every connector, cable, terminal, shield and protective-earth connection before removal.
- Install without forcing keyed parts, then secure terminals, latches, fasteners and cable supports.

OFFICIAL INSTALLATION REFERENCE

330750 and 330752 High Temperature Velomitor System
Datasheet

141639 Rev. V

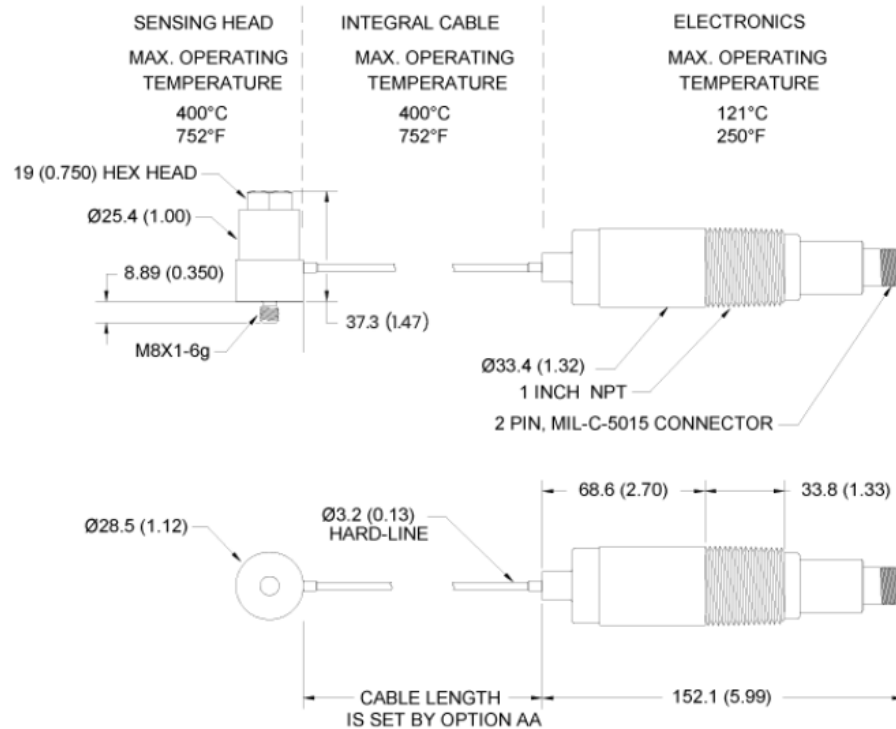

(All dimensions are in millimeters (inches))

Figure 2: 330752 System Dimensional Drawing

04 COMMISSIONING CHECKS

- 01 Confirm product identity and mechanical seating.
- 02 Verify the documented supply before energising.
- 03 Inspect polarity, shielding and protective-earth connections.
- 04 Restore power in the approved sequence and observe status indications.
- 05 Test each connected input, output or communication path.
- 06 Record diagnostics and functional-test results before return to service.

05 CONTROLLED DOCUMENT

Official source	Bently Nevada official manufacturer documentation
Product record	330750-80-05
Manufacturer	330750 and 330752 High Temperature Velomitor
Warranty	12 months from AMIKON
Support	INFO@AMIKON.CN

AMIKON PRODUCT SUPPORT

+86-18020776786

INFO@AMIKON.CN

AMIKONG.COM